

Cleaning Instructions for Lubing Cup

- Remove nipple valve using a pair of multi-grips
- Wash all parts with warm water and detergent, soaking for a while if necessarily
- Don't place in a dishwasher or use chlorine-based dishwasher detergent
- Clip the valve back into position
- Ensure that the pin and nipple are moving freely. If it is spinning then the system is working properly
- Using the same method, remove the float to clean
- This should be done every 3-6 months to ensure a problem free supply of water for your chickens.

